

## Wear parts application guide - Nordberg C series jaw crusher C jaw crusher and basic concepts

The jaw crusher is a compression type crusher. Feed material is crushed between fixed and movable jaw dies. Large particles are crushed in a single layer, referred to as single-layer crushing. Smaller particles are crushed rock on rock, referred to as multi-layer crushing.

### Feed opening

Feed opening (depth of the cavity) defines the maximum feed size of the crusher. In the C jaw crusher, the feed opening is measured from the top of the tooth of the fixed jaw to the bottom of the tooth of the movable jaw in a straight line perpendicular to the center line of the crushing cavity.

The maximum feed size is approximately 80% of the feed opening.

Food oppning dopth Covity width

	reed open	ing depth	Cavity	wiath
	mm	in	mm	in
C80	510	20	800	32
C100	760	30	1000	40
C96	600	24	930	37
C106	700	28	1060	42
C116	800	32	1150	45
C3054	760	30	1380	54
C110	850	34	1100	44
C120	870	35	1200	48
C125	950	37	1250	49
C140	1070	42	1400	55
C145	1100	43	1400	55
C160	1200	47	1600	63
C200	1500	59	2000	79

#### **Open side setting (OSS)**

The open side setting is measured when the crusher is at rest. The setting is measured either top to top, or bottom to top, depending on the tooth profile of the jaw dies.

#### Closed side setting (CSS)


The closed side setting can be calculated by deducting the stroke from the OSS. CSS is the most important crusher parameter since it defines the maximum product size and has significant bearing on capacity, product gradation, power draw, and wear. Check the instruction manual for the permitted minimum CSS.

#### Dimensions to be deducted from the OSS


	mm	in
C80	24	1
C100	32	1 1/4
C96	32	1 1/4
C106	34	1 5/16
C116	37	1 1/2
C3054	32	1 1/4
C110	36	1 3/8
C120	37	1 1/2
C125	41	1 5/8
C140	41	1 5/8
C145	41	1 5/8
C160	41	1 5/8
C200	50	2

### Nip angle

The nip angle is the angle between the fixed and movable jaw dies. Too large a nip angle reduces the capacity and increases the wear as the feed material grinds and gouges the jaw dies in an upwards direction during the compressive stroke of the pitman.

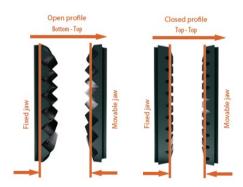



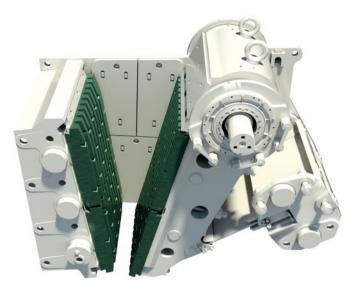

# How to operate a C jaw crusher

In order to get optimum capacity and maximum lifetime of wear parts, consider the following points:

### 1. Check the feed size

• Oversize feed material decreases capacity and can cause unnecessary stresses to the crusher components.

• Small feed size increases wear at the bottom of the cavity and may cause poor utilization of wear parts.

### 2. Check the feed arrangement

• In order to reach optimum capacity and maximize on the life of the wear parts, the crusher cavity should be full.

• The feed must be distributed evenly across the crushing chamber.



## 3. Apply proper scalping

• Fines (material smaller then CSS) should be removed from the feed material. This is done by the grizzly bar section of the feeder. Fines in the jaw crusher increase the percentage of contact area against the jaw dies. This increases scratching and grinding and reduces lifetime.

Note: Feed material characteristics such as gradation, bulk density, moisture, clay content and crushability have significant impact on crusher capacity.



4. Choose the correct jaw dies for the application

### 5. Check the wear profile of the jaws

• An uneven wear profile will decrease capacity, increase wear, and increase crushing forces.





# C jaw crusher wear parts

Due to the wide range of applications and feed material, many types of jaws are available for the C jaw crushers. Below you will find features and basic recommendations for selecting the wear parts.

	Star	dard	Super grip	Qua	arry	Superteeth	Quarr	y thick		+ super rip		thick + r grip	Anti-slab	Recycling	Wavy like
	XT610	XT710	XT710	XT710	XT810	XT710	XT710	XT810	XT710	XT810	XT710	XT810	XT710	XT610/710	XT610/ 710
Blasted rock															
Difficult and abrasive		•	•			••									
Difficult and non abras	ive 🔸	•••		••	••	••	••	••		••		••			
Medium and abrasive		••	••			••									
Medium and non abras	sive 🔸	•••			••	••		••	••	••					
Easy and abrasive	•	••	••		•	••		•	••		••				
Easy and non abrasive	•••	•••	•••			••			••		••				
Slabby soft rock	••	••	••	•					••				•••		
Gravel															
Abrasive		••	••			•••									
Non abrasive		•••				••									
Slippery/ round rock															
Abrasive		••	••	•		••									
Non abrasive	•••	•••	•••	•		••			•••						
Asphalt recycling															•••
Concrete recycling	••	••	••									-		•••	
Demolition waste recycl	ing 🐽	••	••											•••	
• Can be used	•• Good cl	noice	••	<ul> <li>Recom</li> </ul>	mended	l	Definitio	ns for diff	erent rock	types are	presentee	d in Wear	and materia	als application	guide, page 4.
EXISTING PROFILES*	Standard	1	uper grip	Quari	y s	uperteeth	Quarry	thick	Quarry - gri		Quarry supe		Anti-slab	Recycling	Wavy like
	(T610 XT	710 X	T710	(T710 X	T810	XT710	XT710	XT810	XT710	XT810	XT710	XT810	XT710	XT610/710	XT610/ 710
<u>C63</u>															
C80	-														

	X1010	X1/10	X1/10	X1/10	X1810	X1/10	X1/10	X1810	X1/10	X1810	X1/10	X1810	X1/10	X1010/ /10	X1610/ /10
C63															
C80															•
C100															
C96															
C105														-	
C106															
C116															
C3054															
C3055															
C110															
C120															
C125															
C140															
C145															
C160															
C200															

\* More cavities under development, ask for tailored solution options from your local Metso representative.



## Standard (XT710)

- Good in gravel and non abrasive rock
- Tooth spacing ideal for fines removal

• Power requirement and crushing stresses are in balance

- Less slabby product
- Reduced lifetime in abrasive application



## Super grip (XT710)

- Good in gravel and non abrasive rock
- Tooth spacing ideal for fines removal
- Power requirement and crushing stresses
- are in balance
- Less slabby product
- Reduced lifetime in abrasive application



### Quarry (XT710, XT810)

- Good in abrasive and/ or blasted rock
- Flat tooth profile maximizes lifetime (more surface area to crush with)

More wearable Mn-steel than in standard jaws

- Higher stresses and power requirements
- ${\boldsymbol{\cdot}}$  Less space for fines to pass through (fines
- removal from feed material is important)
- Increase in slabby product



## Superteeth (XT710)

- General use in gravel and blasted rock
- Tooth spacing ideal for fines removal
- More tooth contact surface area compared to standard profile
- More wearable Mn-steel than in standard jaws
- Power requirement and crushing stresses
  are in balance
- Less slabby product



### Quarry thick (XT710, XT810)

- Good in abrasive and/or blasted rock
- Fixed jaw die is 40 mm thicker than quarry jaw die (provides longer lifetime)
- Flat tooth profile maximizes lifetime (more surface area to crush with)
- More wearable Mn-steel than in standard jaws
- Higher stresses and power requirements
- Less space for fines to pass through (fines
- removal from feed material is important)
- Increase in slabby product



## Quarry + Super grip (XT710, XT810)

- Good in blasted rock, difficult natural rock
   and slippery rock
- Sharp tooth profile (good grip on the rock)
- Power requirement and crushing stresses are in balance
- Tooth spacing ideal for fines removal
- Can be used when scalping is not efficient
- Less slabby product



## Quarry thick + Super grip (XT710, XT810)

- Good in blasted rock, difficult natural rock and slippery rock
- Sharp tooth profile (good grip on the rock)Power requirement and crushing stresses
- are in balance
- Tooth spacing ideal for fines removal
- Can be used when scalping is not efficient
- Less slabby product

wwww




## Anti-slab (XT710)

- Uneven tooth height (reduces slabs in feed material)
- Less slabby product



## Recycling (XT710)

- Ideal for concrete, brick etc., demolition
  waste
- Wear and crushing forces in good balance
- Tooth spacing ideal for fines removal



- Wavy like (XT710)
- Suitable for asphalt crushing
- Wide grooves (material flows easily through the cavity)



# One or two piece jaw

Large C jaws (C110 and bigger) were originally designed to use a 2 piece jaw die design, while the smaller jaw crushers used a 1 piece jaw die design. A 1 piece jaw design is now also designed for large crushers (C110, C120, C125, C140, and C160).

Note: New lifting tool is required for 1 piece jaws. Please contact your local Metso representative.



### Benefits of 1 piece jaw die design

Faster jaw die replacement - less downtime
Fewer parts - center wedges not required
Easy to install - suitable for limited maintenance space, mobile applications




Benefits of 2 piece jaw die designLonger lifetime expectation (when changed as recommended)

- Reduced scrap rate and cost/ ton
  Standard lifting tool supplied with the crusher
- Good nip angle if jaws are rotated according to recommendations

EXISTING PROFILES*	Standard	Super grip	Quarry		Superteeth	Quarry thick	Quarry + super grip
	XT710	XT710	XT710 XT810		XT710	XT710	XT710
C110	-				-		
C120							
C125							
C140							
C160							

\*More cavities under development.

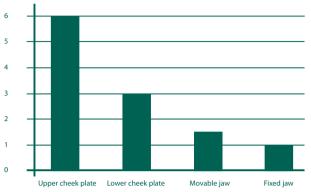

#### Indicative lifetimes of the wear parts. Usually the fixed jaw wears the fastest.

## When to change jaw dies


Change the jaw dies before they are worn through, in order to avoid damage to the crusher components (See instruction manual).

In crushers like C105 and C3055, the jaw die design on the ends is different. The locking wedges on these crushers are located behind the jaw dies rather than at the top of the jaw die. Jaw dies can be allowed to wear until the thickness is 60 to 65 mm thick, or the teeth are worn flat.

On other crushers the ends of the jaw dies are much thinner. The wedge retention design where the locking wedges make contact is much thinner. This allows for the ends of the jaw die thickness to wear to 20 to 25 mm, or when the corrugations are worn flat.

Jaw dies may need to be changed earlier than anticipated, if wear profile is distorted.

On single toggle jaw crushers, the fixed jaw die may wear at a faster rate. The table below shows the indicative lifetime of the wear components.

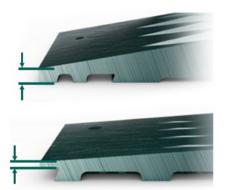

## How to change jaw dies

### Two piece jaw die rotation and replacement

Worn out jaw dies are removed from the bottom of the crushing chamber.
Work hardened upper jaw dies are installed at the bottom of the crushing chamber.
New jaw dies are installed at the top of the crushing chamber.

This procedure will allow for good work hardening of the manganese jaw dies, and maintain the best nip angle for maximum through put.


## One piece jaw die rotation and replacement

• After a new jaw die installation, rotate the single piece jaw dies when 30% of the tooth profile is worn.

• Rotate a second time when the tooth profile at the bottom of the jaw die is completely worn.

This procedure will allow for good work hardening of the manganese jaw dies, and maintain the best nip angle for maximum through put.

Note: Cupping may occur in the joint of movable jaws if the movable jaw is rotated when it is installed in the lower position. This may decrease the crusher's capacity and increase wearing on the fixed side.

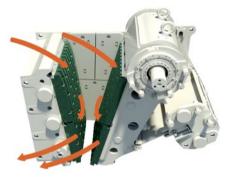





## Accessories

## Intermediate plate

An intermediate plate can be used when feed capacity is low (empty cavity), feed size is small or feed is slippery.

• Increases length of crushing area in case of empty cavity or small feed size -- better wear profile and longer lifetime

Improves nip angle providing better grip of material in case the feed material is slippery
Restrictions are decreased feed opening and maximum setting. These are reduced by the thickness of the intermediate plate.
Crushing forces can be higher when using an intermediate plate.


## Protection plate for pitman and front casting

Protection plates protect surfaces between the jaw dies on the pitman and front-end casting, especially when the material hardness and toughness is a concern, or when crushing at the minimum setting.

Protection plates are suitable for all applications and are delivered as standard equipment on large C jaw crushers (except for C125). Protection plates can also be purchased for other size crushers as an option.





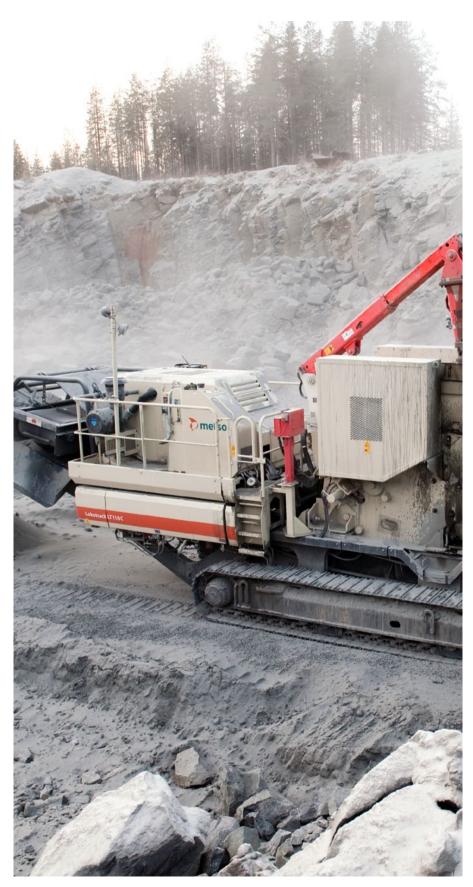

## Legal notice

Metso reserves the right to make changes in specifications and other information contained in this publication without prior notice and the reader should in all cases consult Metso to determine whether any such changes have been made. This manual may not be reproduced and is intended for the exclusive use of Metso customer.

The terms and conditions governing the sale of Metso hardware products and the licensing and use of Metso software products consists solely of those set forth in the written contract between Metso and its customer. No statement contained in this publication, including statements regarding capacity, suitability for use, or performance of products, shall be considered a warranty by Metso for any purpose or give rise to any liability of Metso.

In no event will Metso be liable for any incidental, indirect, special, or consequential damages (including lost profits), arising out of or relating to this publication or the information contained in it, even if Metso has been advised, knew, or should have known of the possibility of such damages.

Metso, 2011. All rights reserved.



## **Expect results**

Expect results is our promise to our customers and the essence of our strategy. It is the attitude we share globally. Our business is to deliver results to our customers, to help them reach their goals.



